 



NoseBar with Bearings for 530 LBP



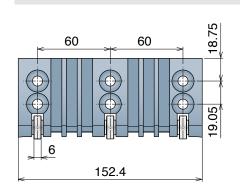


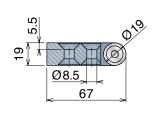


NoseBars with Bearings for 530 PRO LBP

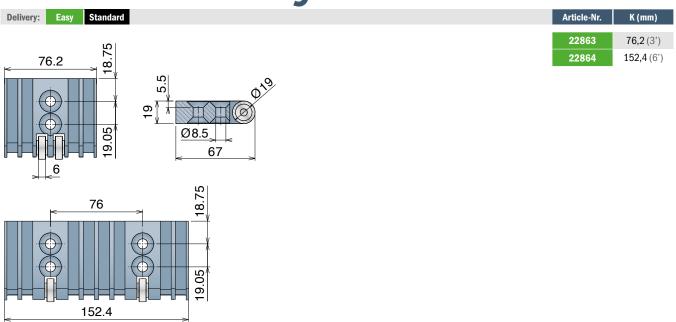

How to use Movex 530 LBP and Pro LBP double-face Nosebar

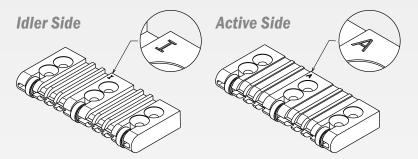


Movex 530 LBP and Pro LBP Nosebars are special Nosebars, specific to optimize the characteristics of this particular belt. It can be installed in two different ways: idler side and active side, depending if you want to obtain the accumulation or acceleration effects of the goods. In both modalities the same Nosebar is used: it simply needs to be installed on one side rather than the other. One face of the Nosebar is set up for the accumulation function and the opposite one for the acceleration function.

 

Idler System (sectional view)

 The nosebar allows the belts rollers to remain raised above the surface, free to roll.



Active System (sectional view)

The nosebar allows the belt rollers to touch the surface, increasing the speed of the goods.